 


Mobile Smart Screen Instruction Manual

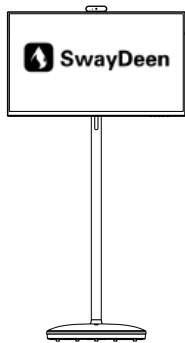

- 1 -

PREFACE

Thank you for purchasing this smart screen!
Read this user manual carefully before using the product and follow the instructions for correct usage.

SAFETY NOTE WARNING

1. Please use the provided power adapter and ensure that the power socket meets safety standards.
2. Before using the product, make sure that all cables are properly connected and that the power cord is not damaged.
3. Do not open the device casing to prevent serious damage caused by the high pressure inside.
4. Do not block or cover the gaps and openings on the device designed for heat dissipation and ventilation.
5. Avoid placing the product in humid, dusty or high-temperature environments to prevent damage or malfunction.
6. Unplug the power cord during thunderstorms or when not in use for long periods of time.
7. Do not pour liquids or other objects into the device to avoid electrical faults or safety hazards.
8. To prevent fires or electric shocks, do not overload the power board or extension cord.
9. During transportation, do not exert excessive pressure on the display and scratch the display with sharp objects to avoid damage.
10. Do not place the device on the edge of a table or in a place accessible to children to avoid injury or harm to children.
11. Please keep the product cable in a neat and orderly manner to prevent bumping.
12. If a malfunction occurs, stop using the product immediately and do not attempt to disassemble or repair it. Contact the original manufacturer or dealer for assistance.

MAINTENANCE & CLEANING


- 01: Regularly clean the screen and the outer casing to prevent dust accumulation and maintain optimal performance.
- 02: Use a lint-free and non-abrasive cloth to clean the surface of the unit; dampen the cloth in a neutral cleaner and wipe away stubborn stains.
- 03: Do not use a cleaner that contains alcohol or acetone, use a cleaner specifically for LCDs.
- 04: Do not spray the cleaner directly onto the screen, as the cleaner may seep into the machine and cause electric shock.
- 05: Avoid prolonged continuous usage, take regular breaks and disconnect the power to prolong the device's lifespan.

- 2 -

PRODUCT INTRODUCTION

The mobile screen is a smart terminal display product that can be charged and moved, with a micro-bezel design and a full-screen design style. Its hardware configuration mainly includes:


- Built-in battery with long standby time
The device has an ultra-long standby function, users can continue to listen to music, watch videos and other entertainment or office at any time and anywhere.
- Physical lift, swivel, and tilt support
Equipped with a mobile stand that can be adjusted and lifted at multiple angles, you can freely choose to get a more comfortable viewing experience.
Height: 17CM lift stroke, high and low with stop.
Rotation: 90° counterclockwise rotation, easy to realize the horizontal and vertical screen freedom
Tilt: 30° elevation angle, 30° pitch angle
- 1080P HD display, fully laminated anti-glare touch screen

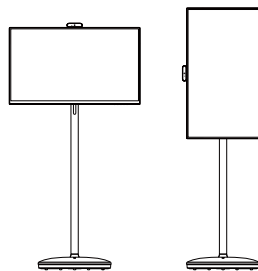


- 3 -

INSTRUCTION FOR INSTANTATION

Tools You'll Need Our product installation is very simple, please follow the following steps, easy to get the installation

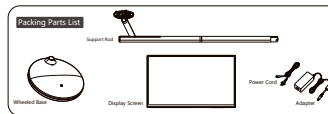

Installation Steps

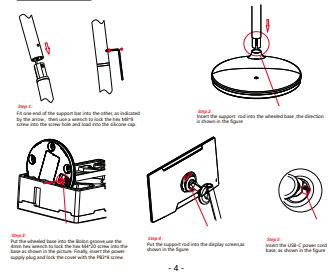

- 4 -

HOW TO TURN ON HTE DISPLAY

POWER ON



Step1: Press to turn on the power



Step2: Press and hold the "POWER" to enter the system


POWER OFF



Press and hold to turn off the power


- 5 -

MACHINE INTRODUCTION

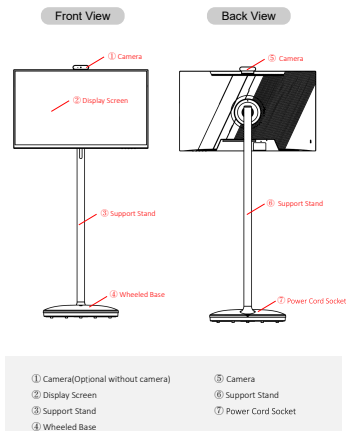


- 6 -

Left and right view

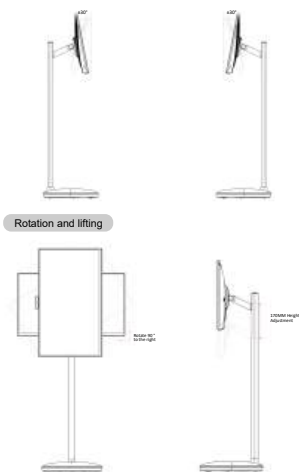


- 7 -

Top View

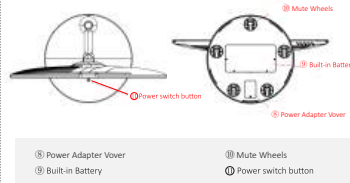

Description of Interfaces and Buttons

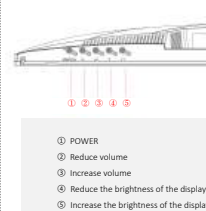

- 8 -


BUILT-IN BATTERY DESCRIPTION

The base of this product has a built-in rechargeable battery that can be used for a period of time without being connected to another power source.

When the battery is depleted, it can be recharged by connecting the charger. When the charger is plugged into the DC port on the base, the power indicator blue light is always on and the green light is running.

When the battery is fully charged the power indication blue light and running green light are always on; when uncharged single discharged the blue light blinks and the green light is always on, when discharging while charging, the blue light and green light blink at the same time.

Manually long press the power indication, blue light and green light go out at the same time, no voltage output; manually long press the power indication blue light can start.

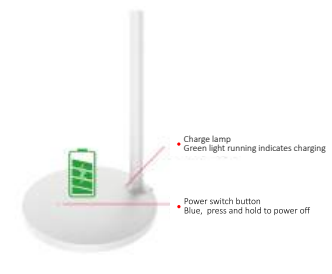

- 9 -

Notes:

- It takes about 8 hours to fully charge the battery with the device in use at the same time, about 4 hours to fully charge the battery with the device turned off, and about 4 hours to use the device with the battery fully charged.
- Battery life and runtime are directly proportional to the amount of time the device is used.
- To prolong battery life, it is recommended to recharge the battery after a period of use, and once the battery is fully charged, do not leave it fully charged for a long period of time or charge the battery under extreme conditions.
- The standard usage times in this manual are based on test data from our laboratory and may vary depending on the conditions of use.

PACKING LIST

Serial Number	Name	Quantities
1	Display Screen	1
2	Camera	1
3	Wheeled Base	1
4	Support Stand	1
5	Power Adapter	1
6	User Manual	1
7	Mounting Tools	1

*Read this manual before using the product and keep it for reference.
*The pictures in this manual are used to guide the user's operation and are for reference only, please refer to the real thing.

- 10 -