


Installation Steps


Step 1

Adjust the casters to the braking state and screw them into the legs (as shown in Figure 1).

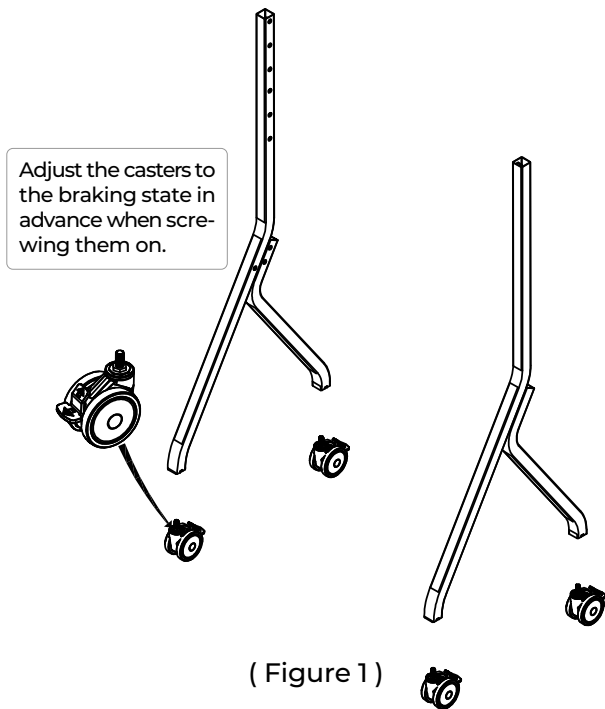


Step 2

Attach the wall - mount bracket horizontally to one of the legs (as shown in Figure 2).

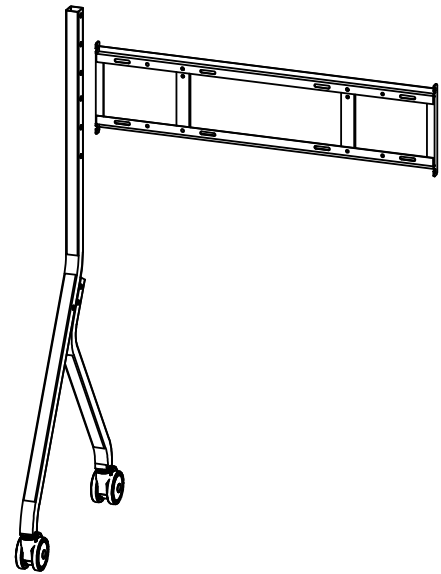

Step 3

Attach the other leg to the other end of the wall-mount bracket (as shown in Figure 3).

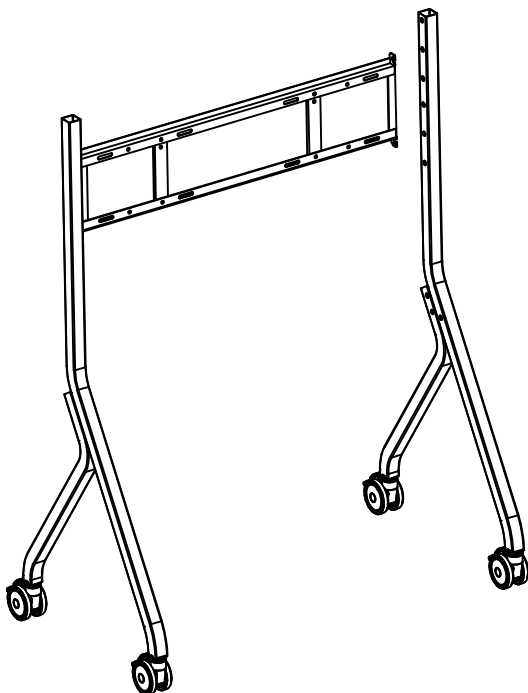

Step 4

Assemble the tray between the two vertical posts (as shown in Figure 4).

